


## EXPLOSIVE VIEW OF WD060210808

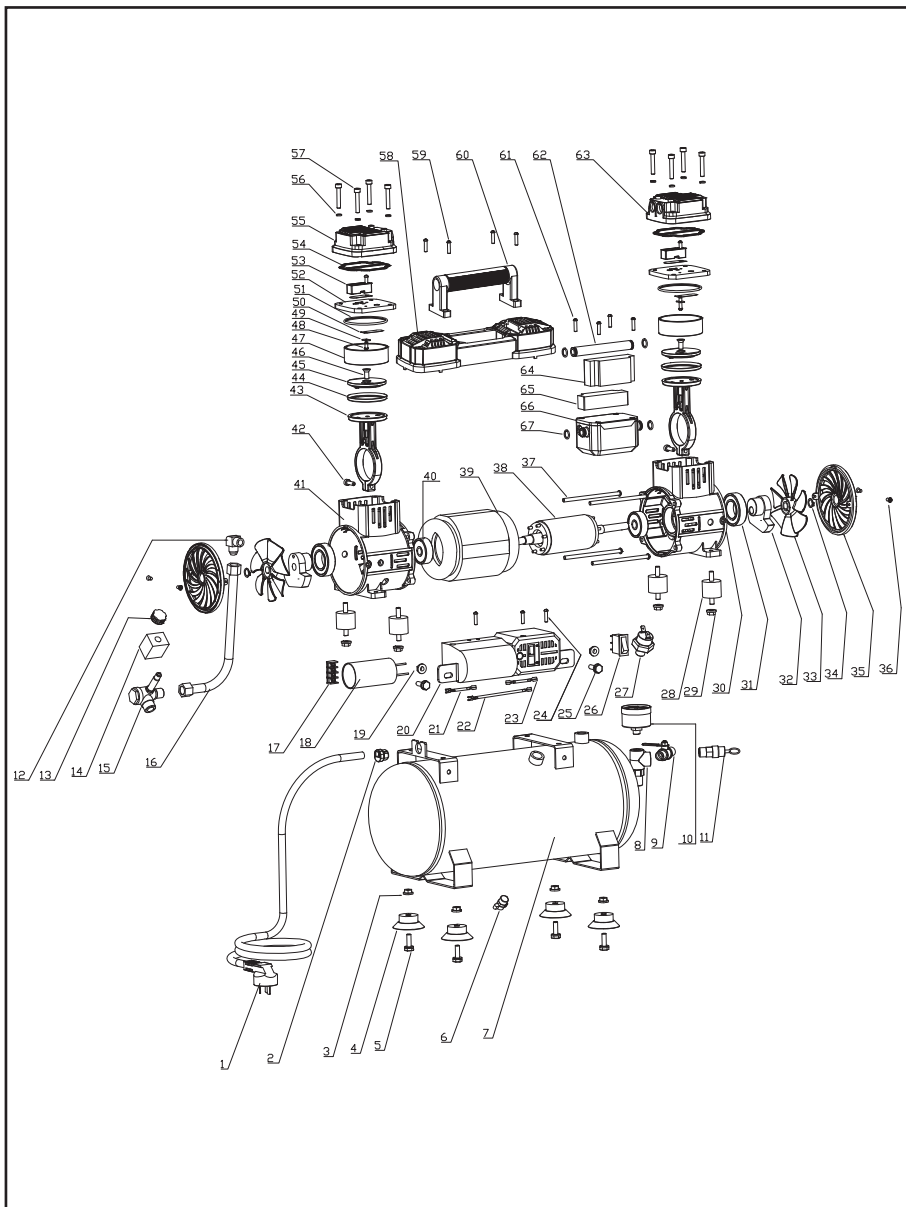

**PART LIST OF WD060210808**

<b>NO</b>	<b>DESCRIPTION</b>	<b>Q'TY</b>	<b>NO</b>	<b>DESCRIPTION</b>	<b>Q'TY</b>
1	Cable and plug	1	35	Crank case cover	2
2	Cable protector	1	36	Screw	4
3	Nut	4	37	Bolt	4
4	Cushion foot	4	38	Rotor	1
5	Bolt	4	39	Stator	1
6	Drain cock	1	40	Bearing 6301	2
7	Air tank	1	41	Left crank case	1
8	Pipe joint	1	42	Bolt	2
9	Air cock	1	43	Connecting rod	2
10	Pressure gauge	1	44	Seal cup	2
11	Safety valve	1	45	Press plate of seal cup	2
12	Pipe joint	1	46	Screw	2
13	Cap of solenoid valve	1	47	Cylinder	2
14	Solenoid valve	1	48	Screw	4
15	Check valve	1	49	Press plate of valve plate	2
16	High pressure pipe	1	50	Valve plate	4
17	Terminal	1	51	Seal ring	2
18	Capacitor	1	52	Valve body	2
19	Nut of capacitor box	2	53	Stop block	2
20	Capacitor box	1	54	Head gasket	2
21	Connecting wire	1	55	Left cylinder head	1
22	Connecting wire	1	56	Spring washer	8
23	Connecting wire	1	57	Bolt	8
24	Screw	3	58	Plastic cover	1
25	Bolt of capacitor box	2	59	Screw	4
26	Switch	1	60	Handle	1
27	Pressure switch	1	61	Screw	4
28	Shock pad	4	62	Pipe	1
29	Nut	4	63	Right cylinder head	1
30	Right crank case	1	64	Big air filter	1
31	Bearing 6005	2	65	Small air filter	1
32	Crank shaft	2	66	Air filter housing	1
33	Fan	2	67	O ring	4
34	Circlip	2			