


## EXPLOSIVE VIEW OF WD060212415

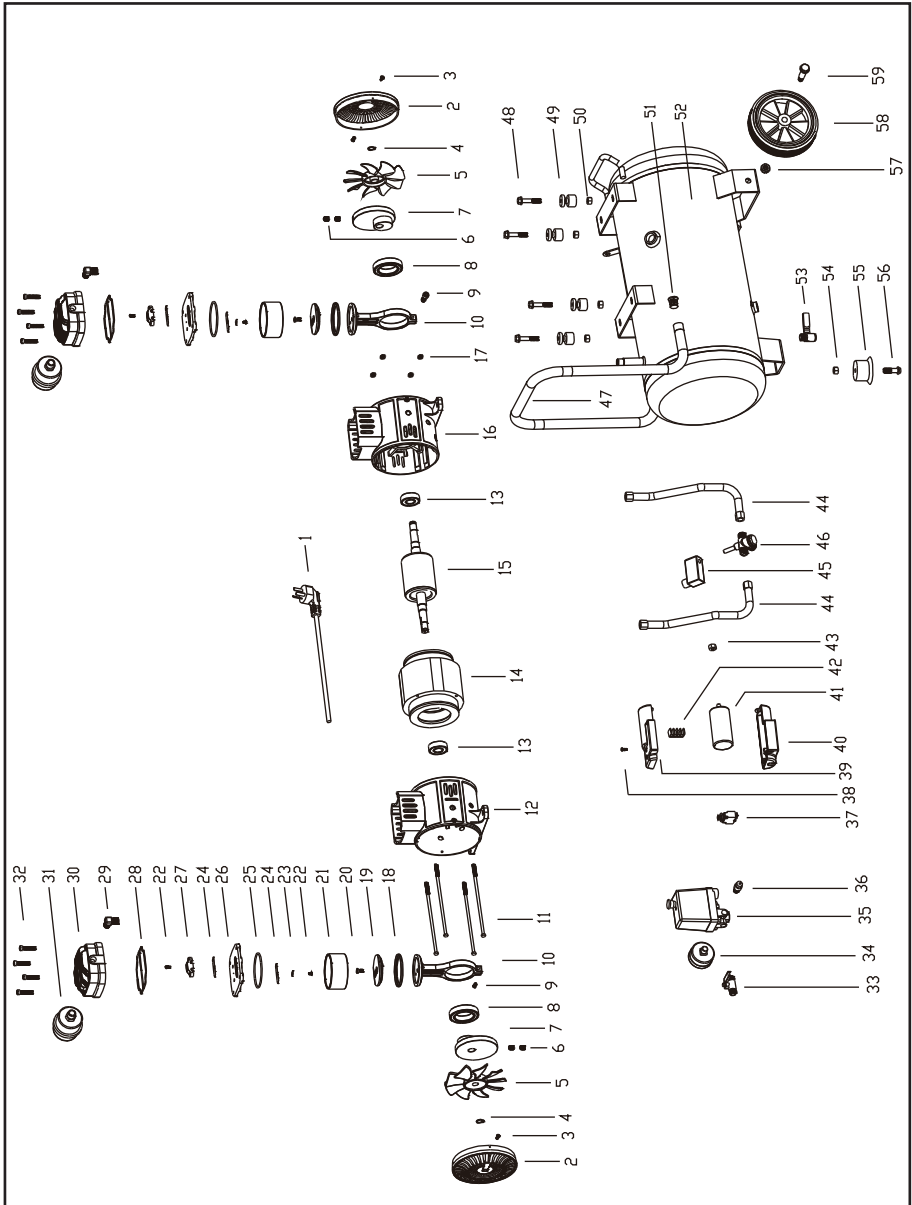

**PART LIST OF WD060212415**

<b>NO</b>	<b>DESCRIPTION</b>	<b>Q'TY</b>	<b>NO</b>	<b>DESCRIPTION</b>	<b>Q'TY</b>
1	Cable and plug	1	31	Air filter	2
2	Crank case cover	2	32	Bolt	8
3	Screw	4	33	Air cock	1
4	Circlip	2	34	Pressure gauge	1
5	Fan	2	35	Pressure switch	1
6	Screw	4	36	Safety valve	1
7	Crank shaft	2	37	Over current protector	1
8	Bearing 6006	2	38	Screw	1
9	Bolt	2	39	Capacitor box cover	1
10	Connecting rod	2	40	Capacitor box	1
11	Bolt	4	41	Capacitor	1
12	Left crank case	1	42	Terminal	1
13	Bearing 6203	2	43	Nut	1
14	Stator	1	44	High pressure pipe	2
15	Rotor	1	45	Solenoid valve	1
16	Right crank case	1	46	Check valve	1
17	Nut	4	47	Handle	1
18	Seal cup	2	48	Bolt	4
19	Press plate of seal cup	2	49	Shock pad	4
20	Screw	2	50	Nut	4
21	Cylinder	2	51	Plug	2
22	Screw	4	52	Air tank	1
23	Press plate of valve plate	2	53	Drain cock	1
24	Valve plate	4	54	Nut	1
25	Seal ring	2	55	Cushion foot	1
26	Valve body	2	56	Bolt	1
27	Valve plate press cover	2	57	Nut	2
28	Head gasket	2	58	Wheel	2
29	Pipe joint	2	59	Bolt	2
30	Cylinder head	2			