


EXPLOSIVE VIEW OF WD060215020

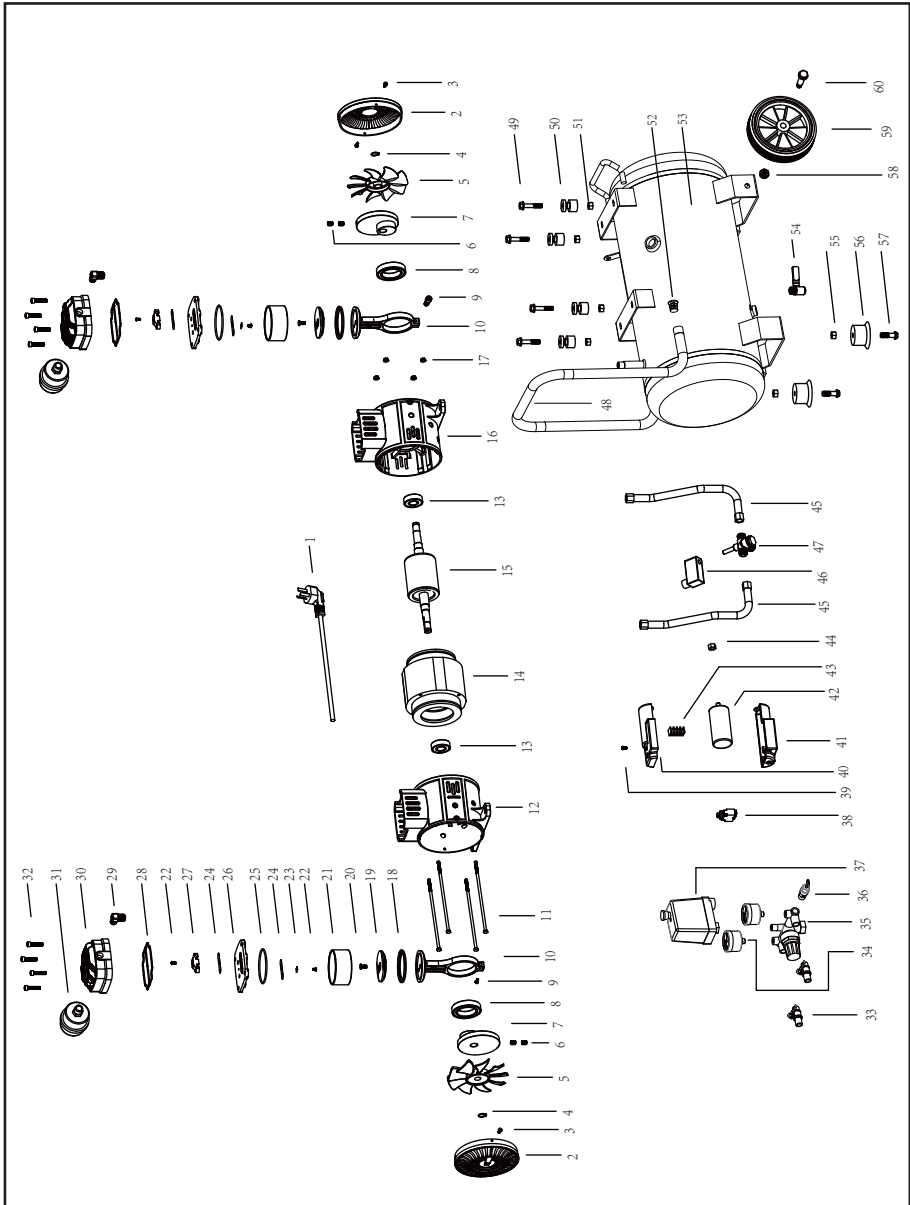

PART LIST OF WD060215020

NO	DESCRIPTION	Q'TY	NO	DESCRIPTION	Q'TY
1	Cable and plug	1	31	Air filter	2
2	Crank case cover	2	32	Bolt	8
3	Screw	4	33	Air cock	1
4	Circlip	2	34	Pressure gauge	2
5	Fan	2	35	Support with pressure regulator	1
6	Screw	4	36	Safety valve	1
7	Crank shaft	2	37	Pressure switch	1
8	Bearing 6006	2	38	Over current protector	1
9	Bolt	2	39	Screw	1
10	Connecting rod	2	40	Capacitor box cover	1
11	Bolt	4	41	Capacitor box	1
12	Left crank case	1	42	Capacitor	1
13	Bearing 6203	2	43	Terminal	1
14	Stator	1	44	Nut	1
15	Rotor	1	45	High pressure pipe	2
16	Right crank case	1	46	Solenoid valve	1
17	Nut	4	47	Check valve	1
18	Seal cup	2	48	Handle	1
19	Press plate of seal cup	2	49	Bolt	4
20	Screw	2	50	Shock pad	4
21	Cylinder	2	51	Nut	4
22	Screw	4	52	Plug	2
23	Press plate of valve plate	2	53	Air tank	1
24	Valve plate	4	54	Drain cock	1
25	Seal ring	2	55	Nut	2
26	Valve body	2	56	Cushion foot	2
27	Valve plate press cover	2	57	Bolt	2
28	Head gasket	2	58	Nut	2
29	Pipe joint	2	59	Wheel	2
30	Cylinder head	2	60	Bolt	2