


EXPLOSIVE VIEW OF WD041220180

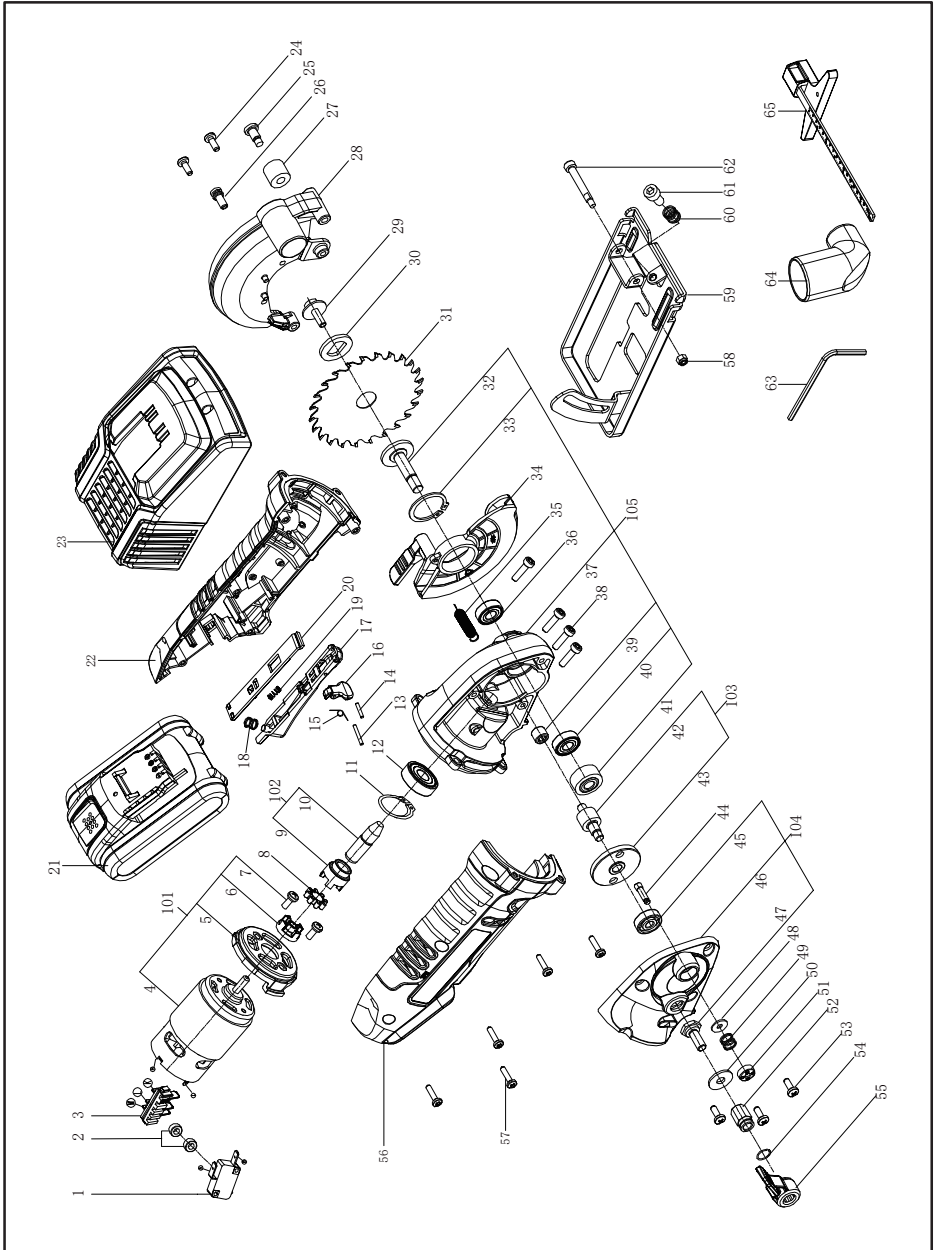

PART LIST OF WD041220180

NO	DESCRIPTION	Q'TY	NO	DESCRIPTION	Q'TY
1	Switch	1	34	Lower guard	1
2	Magnet ring	2	35	Spring	1
3	Terminal	1	36	Bearing 628	1
4	Motor	1	37	Gear case	1
5	Adapter plate	1	38	Screw	4
6	Clutch	1	39	Needle bearing	1
7	Screw	2	40	Bearing 619	1
8	Flexible coupling	1	41	Gear	1
9	Clutch	1	42	Gear	1
10	Shaft gear	1	43	Gear	1
11	Circlip	1	44	Locking spindle	1
12	Bearing 6000	1	45	Bearing 626	1
13	Cylindrical pin	1	46	Gear case cover	1
14	Cylindrical pin	1	47	Bolt	1
15	Torsion spring	1	48	Washer	1
16	Lock-off button	1	49	Spring	1
17	Switch trigger	1	50	Washer	1
18	Spring	1	51	Spindle lock button	1
19	Spring	1	52	Nut	1
20	Fixed plate	1	53	Screw	3
21	Battery pack	1	54	Circlip	1
22	Left housing	1	55	Lock lever	1
23	Charger	1	56	Right housing	1
24	Screw	2	57	Screw	5
25	Screw	1	58	Nut	1
26	Screw	1	59	Base plate	1
27	Stopper	1	60	Spring	1
28	Upper guard	1	61	Bolt	1
29	Left-handle bolt	1	62	Bolt	1
30	Outer flange	1	63	Hex key	1
31	Saw blade	1	64	Vacuum adaptor	1
32	Output shaft	1	65	Parallel guide	1
33	Circlip	1			